

WIRELESS SET TOP BOX SETUP

- You will have two cords, one that goes to the TV, and one that plugs into the electrical outlet. The first time a cable box is plugged in it can take 10-15 minutes to boot-up.
- Once a message comes up on the TV screen that says **PRESS OKAY TO CONNECT**, with a hand pointed down to **CONNECT**, the wireless box is now ready to sync into the wireless network.

Wireless Access Point

You will have a tall black tower (12" tall) with flashing green lights, a square shaped gray box (9" tall). The device you have will determine the next steps you follow

TALL ACCESS POINT

- Once the TV screen says **PRESS OKAY TO CONNECT**, go to the wireless access point and press the **WPS** button 3 times.
- After **WPS** button is pressed 3 times, you will have 2 minutes to complete step 3.
- Go back to the cable box and press the **OK** button on the front of the box.
- After about 1 minute, you'll see a bright colored striped screen or a screen with a starry night sky. 2-4 minutes after that the cable program will show up.

SMALL ACCESS POINT

- Once the TV says **PRESS OKAY TO CONNECT**, go to the small tower and press and hold the **WPS** button for 3 seconds.
- After **WPS** button is pressed, You will have 2 minutes to complete step 3.
- Go back to the cable box and press the **OK** button on the front of the box.
- After about 1 minute, you'll see a bright colored striped screen or a screen with a starry night sky. 2-4 minutes after that the cable program will show up.

**If this process does not work, you must start process over.
Begin by unplugging the power cord from the cable box and plugging it back in.
Repeat steps again, this could take 2-3 tries.**