

MXv4

PROGRAMMING YOUR PBTv REMOTE FOR POWER & VOLUME

START WITH TV TURNED ON

CODE SEARCH METHOD


- Press and hold Setup **4** until LED at the top of the remote blinks twice.
- Press and release TV **1** button.
- Press and hold OK **2** button until the device turns off.

IF THE VOLUME WORKS, DO THE FOLLOWING STEPS:

LOCK THE VOLUME METHOD

- Press the TV **1** button.
- Press and hold Setup **4** until TV **1** button blinks twice.
- Press Volume + **5** button one time.
- Press the TV **1** button.
- Press the STB **6** button.



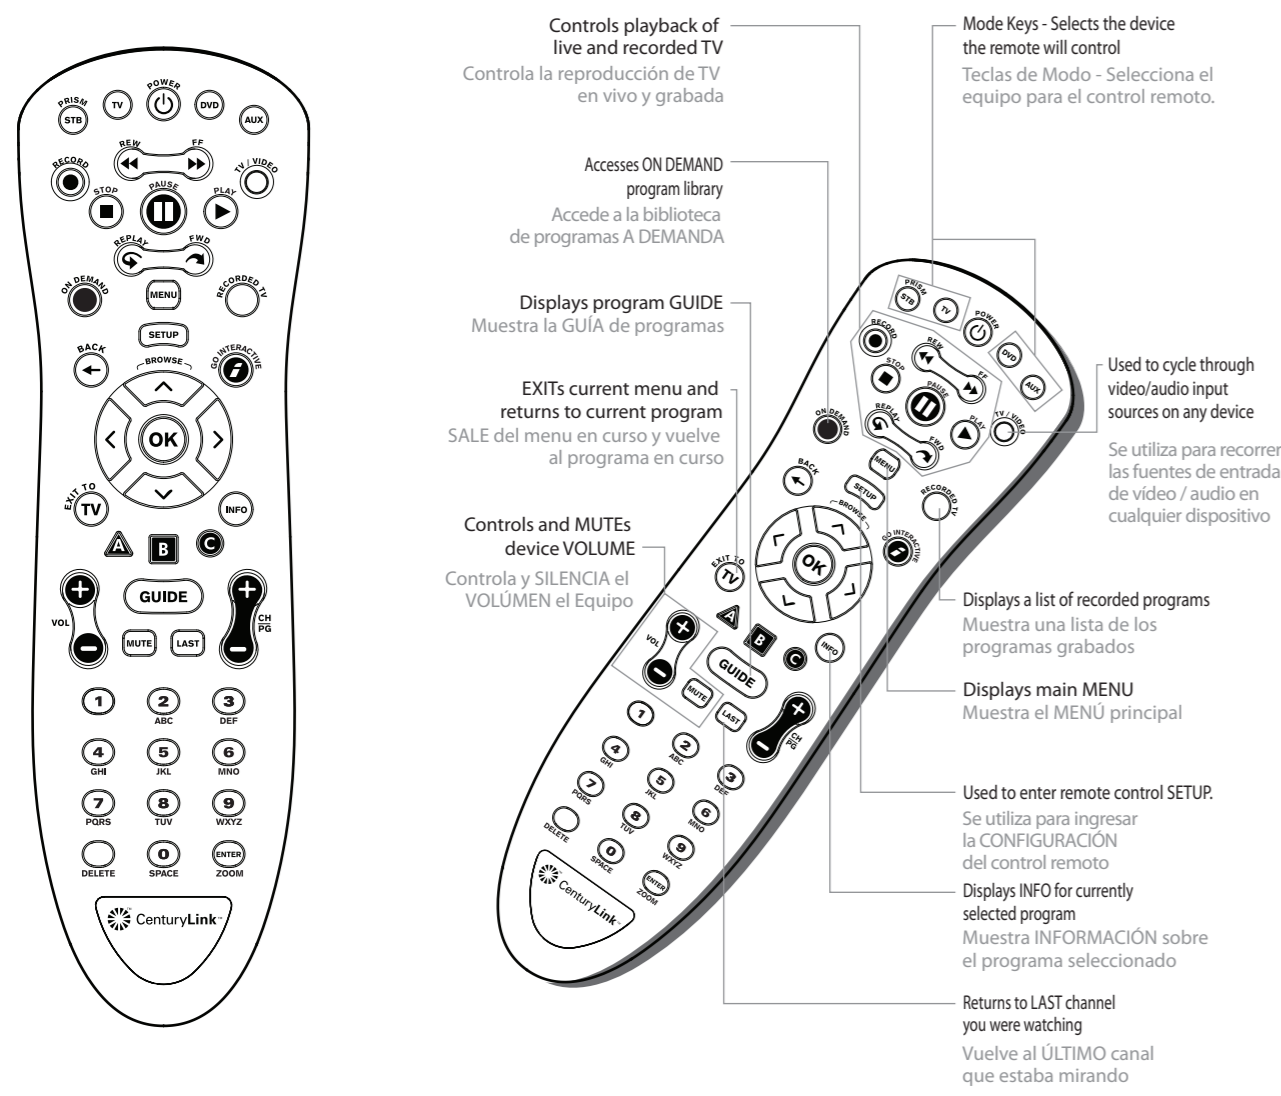

Getting Started

Primeros Pasos

Note/Nota: Make sure all home theater equipment is ON before starting remote control setup. Asegúrese de que todo el equipo de cine en casa (home theater) esté ENCENDIDO (ON) antes de comenzar la configuración del control remoto.

- 1 Remove battery cover.** Retire la tapa del compartimiento de pilas.
 - 2 Insert 2 AA batteries.** Match the + and - marks. Coloque 2 pilas AA. Haga coincidir las marcas "+" y "-".
 - 3 Replace battery cover.** Vuelva a colocar la tapa del compartimiento de pilas.
- Tip/Consejo:** The mode key will blink 5 times with each key-press when batteries need replacement. La tecla de Modo parpadeará 5 veces con cada pulsación de tecla cuando sea necesario reemplazar las pilas.

Setup Method B:

Configuración - Método B:

1 Press the mode key for the device you wish to setup. Presione la tecla de modo para el equipo que desee configurar.

TV DVD AUX

2 Press and hold SETUP until the mode key blinks twice. Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.

SETUP

3 Enter the 1st code for your brand from the code list. (See reverse side for codes.) Ingrese el primer código de TV que corresponda a la marca de su TV de la lista de códigos. (Vea el reverso para los códigos.)

1 2 3
4 5 6
7 8 9
0

4 Press POWER key to test with your device. If the device turns off, setup is complete. Presione la tecla de encendido/apagado (POWER) para probar con su equipo. Si el equipo se apaga, la configuración se ha completado.

5 If device does not turn off, repeat SETUP METHOD B using the next code for your brand. Si el equipo no se apaga, repita el MÉTODO DE CONFIGURACIÓN B utilizando el próximo código que corresponda a su marca.

Setup Using Direct Code Entry

Configuración del Control de TV utilizando Entrada Directa de Código

Setup Method C:

Configuración - Método C:

1 Press and hold SETUP until the mode key blinks twice. Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.

SETUP

2 Press the mode key for the device you wish to setup. The mode key stays lit. Presione la tecla de modo para el equipo que desee configurar. La tecla de modo permanece encendida.

TV DVD AUX

Code Search

Búsqueda de Código

3 Press and hold the OK key. Presione y mantenga presionada la tecla OK (Aceptar).

OK

4 Release the OK key when your device turns off. Suelte la tecla OK (Aceptar) cuando su equipo se apague.

Setup Method A:

Configuración - Método A:

Popular Brands

Marcas famosas

1 Press and hold SETUP until the mode key blinks twice. Presione y mantenga presionada la tecla SETUP (Congurar) hasta que la tecla de modo parpadee dos veces.

SETUP

2 Press the mode key for device you wish to setup. The mode key stays lit. Presione la tecla de modo para el equipo que desee configurar. La tecla de modo permanece encendida.

TV DVD AUX

3 Find your device and brand from the charts below and note the number key assigned to your brand. Busque su equipo y marca en las tablas que figuran a continuación y observe el código de número (Número) asignado a su marca. Mantenga presionada la tecla del número que corresponda a la marca de su equipo.

1 2 3
4 5 6
7 8 9
0

4 Release the key when your device turns off. Setup for that device is complete. Suelte la tecla cuando su equipo se apague. La configuración para ese equipo se ha completado.

2 BLINKS = SUCCESS
1 LONG BLINK = FAILURE
2 PARPADEOS = CORRECTA
1 PARPADEO LARGO = INCORRECTA

Number Número	TV	Number Número	DVD/VCR	Number Número	Audio
1	Insignia / Dynex	1	LG	1	Bose
2	LG	2	Memorex	2	Denon
3	Mitsubishi	3	Panasonic	3	LG
4	Panasonic	4	Philips / Magnavox	4	Onkyo
5	Philips / Magnavox	5	RCA	5	Panasonic
6	Samsung	6	Samsung	6	Philips
7	Sharp	7	Sharp	7	Pioneer
8	Sony	8	Sony	8	Samsung
9	Toshiba	9	Sylvania	9	Sony
0	Vizio	0	Toshiba	0	Yamaha

Locking Volume Controls to One Device

Bloqueo de los Controles de Volumen a un equipo

Tip/Consejo: By default, the volume keys will control any device depending on the mode selected. Follow these steps to lock the volume keys to just one device no matter which mode is selected. De forma predeterminada, las teclas de volumen se controla cualquier dispositivo en función del modo seleccionado. Siga estos pasos para bloquear las teclas de volumen para un solo dispositivo, sin importar el modo seleccionado.

1 Press and hold SETUP until the mode key blinks twice. Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.

SETUP

2 Press VOL + key. Presione la tecla aumentar volumen (VOL +).

VOL +

3 Press the mode key that corresponds to the device you use for volume controls. Presione la tecla de modo que corresponda al equipo que está utilizando para controles de volumen.

TV DVD AUX

2 Blinks = Success
1 Long Blink = Failure
2 Parpadeos = Correcta, 1 Parpadeo Largo = Incorrecta

To cancel volume control lock:
1 - Press and hold SETUP until a mode key blinks twice.
2 - Press the Mute key. The mode key will blink 4 times upon successful unlock.

Para cancelar el bloqueo de control de volumen:
1 - Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.
2 - Presione la tecla Silencio. La tecla de modo parpadeará 4 veces al desbloqueo exitoso.

Locking TV/Video Key to One Device

Bloqueo de TV / Vídeo Tecla a Un Dispositivo

Tip/Consejo: By default, the TV/Video key will control any device depending on the mode selected. Follow these steps to lock the TV/Video key to just one device no matter what mode is selected. De forma predeterminada, la tecla TV / Video controlar cualquier dispositivo en función del modo seleccionado. Siga estos pasos para bloquear la tecla de TV/Video en un solo dispositivo, sin importar lo que se selecciona el modo.

1 Press and hold SETUP until the mode key blinks twice. Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.

SETUP

2 Press the TV/Video key. Presione la tecla TV/Vídeo.

TV / VIDEO

3 Press the mode key that corresponds with the device you use for changing audio/video inputs. Presione la tecla de modo que corresponda al equipo que está utilizando para cambio de entradas audio/vídeo.

TV DVD AUX

2 Blinks = Success
1 Long Blink = Failure
2 Parpadeos = Correcta, 1 Parpadeo Largo = Incorrecta

To cancel TV/Video lock:
1 - Press and hold SETUP until a mode key blinks twice.
2 - Press the TV/Video key, then the Exit to TV key. The mode key will blink 4 times upon successful unlock.

Para cancelar el bloqueo del interruptor de entrada:
1 - Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.
2 - Presione la tecla TV/Vídeo. Luego la tecla Exit To TV. La tecla de modo parpadeará 4 veces al desbloqueo exitoso.

MXv3

PROGRAMMING YOUR PBTV REMOTE FOR POWER & VOLUME

START WITH TV TURNED ON

CODE SEARCH METHOD

Press and hold the TV **1** button. While holding it, press the OK key **2** for one second.

Release both keys and all the mode keys will flash, then the selected mode key (TV **1**) will stay lit.

Press the POWER **3** button repeatedly until the TV set turns off. Once the TV has turned off, press OK **2** to save the code.

The TV light will go out to indicate a successful setup.

IF THE VOLUME WORKS, DO THE FOLLOWING STEPS:

LOCK THE VOLUME METHOD

Press and hold the TV **1** button. While holding it, press the OK key **2** for one second.

Release both keys and all the mode keys will flash, then the selected mode key (TV **1**) will stay lit.

Press and hold the MUTE **4** key until the TV light turns off and remains on.

Press and release the TV **1** button (it will remain lit when released)

Press and release the MUTE **4** button to store setting.





**Motorola
Advanced Series
MXv3 Remote Control**

Battery Installation

1. On the back of the remote, push down on the tab and lift the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert 2 AA alkaline batteries.
3. Press the battery cover back into place.

Programming the remote to control other devices

The remote control will only control the device which is selected by the appropriate mode key (STB, TV, DVD, and AUX). The mode key light for the selected device flashes each time a valid key is pressed. In order to control other devices with your MXv3 Remote Control, you need to tell the remote control what types of devices you have. Sections A and B take you through the steps needed to do this. The volume controls will control your Set Top Box (STB) until the TV device mode is setup. The channel controls will always control your STB. If you want to change this, you should follow the steps in Sections E & F.

To use your MXv3 Remote Control for your other devices, you will need to setup the TV, DVD and AUX mode keys to control the devices (Section A).

Please refer to the code list (on separate sheet) for a list of supported brands and models. If you do not find the brand of your device on the supported code list, please refer to section B for the search function or you may use section C for instructions on the learning feature of your remote control.

If you have an integrated or combo unit such as a TV/DVD, each component of the unit may need to be setup separately by setting up both the TV and DVD mode keys.

NOTE: The DVD and AUX mode keys can be setup with any code. The TV mode key can only be setup with TV codes.

A. Manual Programming

Use the following steps to setup the TV, DVD or AUX mode keys:

1. Power on the device you want to program and locate the 4-digit code from the code list.
2. Press and hold the mode key (TV, DVD, or AUX) and while holding it pressed, press the OK key for one second.
3. Release both keys, all of the mode keys will flash then the selected mode key light will stay lit.
4. Enter the 4-digit code by pressing the numerical keys (0-9). The selected mode key light will blink for each digit entry and will remain off after the entry of the fourth digit - indicating a successful setup.
5. Point the remote control at the selected device and press the power key once. The device should turn off. If the device stayed on, repeat the steps 2 thru 5 trying each code for your brand until you find the correct code.

Repeat the steps on the previous page to setup another device. To use the remote control for your Set Top Box, press the STB mode key.

NOTE: If an invalid code is entered or no key is pressed at all for 30 seconds, the mode key light flashes for 3 seconds and turns off. The remote control returns to normal operation and you will need to start over from step A2 to setup the device.

B. Using the Search Function

To search for a particular device code for DVD or AUX e.g. VCR, use the Manual Programming for section A and program DVD or AUX with any VCR code prior to starting a search.

1. Turn on the device you want to control and point the remote at that device.
2. Press and hold the mode key (TV, DVD, or AUX) and while holding it pressed, press the OK key for one second.
3. Release both keys, all of the mode keys will flash then the selected mode key light will stay lit.
4. Press the power button repetitively until the selected device turns off. Once your device has turned off, press OK to save the code.
5. To indicate a successful setup, the selected mode key will turn off and you are ready to setup another device by following steps 1 thru 4 of this section.

C. Learning

If the code for your device is not found in the code list and the search feature was not able to find the code for your device, then the learning feature may be your best option. The learning feature lets you "learn" functions from your original remote control.

Note: Learning cannot be performed for any mode until after that mode is setup with a valid code. So, to learn the keys, first setup the mode with a valid code, see section A, (select any code for the appropriate mode, from the code list), then follow the steps below.

C-I. Learning Commands

1. Press and hold the mode key (TV, DVD, or AUX) on the MXv3 remote and while holding it pressed, press the LEARN key for one second then release both keys.



Motorola remote

1 inch apart



Your original remote

2. All of the mode keys will flash and then the selected mode key light remains on.
3. On your MXv3 remote, press and release the key that you want to teach.
4. While pointing your original remote at the bottom of your MXv3 remote, approximately 1 inch apart, press and hold the original remote key until the mode key light blinks once and stays on. (If there is a learning problem, the mode key light blinks for three seconds and stays on. If this happens, repeat steps 3 and 4 above.)
5. Repeat steps 3 and 4 on previous page for each key you want your MXv3 Remote Control to learn.
6. Press and release the LEARN key when all desired remote commands have been learned. If you have encountered difficulties with the LEARN key setup, please refer to Section K: Troubleshooting Learning.

NOTE: It is not necessary to have your MXv3 Remote Control learn every key from your original remote since most of the keys will not be used under normal daily use. The best practice is to teach only the keys that help you navigate for the best experience, like your volume up and down, channel up and down, and DVR functions.

D. Clearing Commands

D-I. To Clear all Learned Commands (under a single mode)

1. Press and hold the mode key (TV, DVD, or AUX) and while holding it pressed, press the LEARN key for one second then release both keys.
2. All the mode keys will flash and the selected mode key light will stay on.
3. Press and release the LEARN key once. The mode key light blinks off.
4. Press and release the DELETE key. The mode key light turns off. All learned Commands under that mode are now cleared.

D-II. To Clear all Learned Commands (under ALL modes)

1. Press and hold the mode key (TV, DVD, or AUX) and while holding it pressed, press the LEARN key for one second then release both keys.
2. All the mode keys will flash and the selected mode key light will stay on.
3. Press and release the LEARN key twice. The mode key light blinks off.
4. Press and release the DELETE key. The mode key light turns off.

All learned Commands in the remote are now cleared.

E. Volume Control Setup Options

The volume controls will control your Set Top Box until the TV device mode is programmed, e.g. if DVD mode is selected then volume controls your STB. If TV mode is programmed and DVD mode is selected, then volume controls your TV.

If you'd like the volume commands to operate from just one device, e.g. always TV, then follow the instructions in Section E-I. If you'd like the volume commands to be sent to different devices depending which mode you are in, then follow the instructions in Section E-II.

E-I. Volume Always Controls the Same Device

1. Press the TV key and while holding it pressed, press the OK key for 1 second.
2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.
3. Press and hold the MUTE key for 3 seconds until the TV mode key light briefly turns off then remains on. Press and release the mode key that you always want to operate the volume commands (STB, TV, DVD, and AUX). The selected mode key light will remain on.
4. Press and release the MUTE key to save the setting. The selected mode key light will turn off indicating a successful setup. The volume commands will be setup for the selected device despite what mode is selected. If the selected mode key light flashes for 3 seconds and turns off, then the selected mode will have no volume commands of its own and will need to start over from step 1 above and select a different mode to program the device.

E-II. Volume Control Depends on Device Selected

1. Press and hold the TV key and while holding it pressed, press the OK key for one second.
2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.
3. Press and hold the MUTE key for 3 seconds until the TV mode key light briefly turns off then stays on, then release the MUTE key.
4. Press and release the MUTE key to save the setting. The TV mode key light turns off indicating successful setup. The volume commands will now work for different devices.

NOTE: If a programmed mode key has no volume commands of its own, then the volume control will normally operate the TV. If an invalid key is pressed, the selected mode key light flashes for 3 seconds and turns off. The remote control returns to normal operation and you will need to start over. If no key is pressed within 30 seconds, the remote control times out, the selected mode key light flashes for 3 seconds and turns off. The remote control returns to normal operation at which time you can start over.

F. Channel Control Setup Options

The channel controls (Channel Up/Down, 0-9 and LAST) will always work your Set Top Box. If you'd like the channel commands to be sent to different devices depending which mode you are in, then follow the instructions in Section F-I.

F-I. Channel Control Depends on Device Selected

1. Press and hold the TV key and while holding it pressed, press the OK key for one second.
2. Release both keys, all of the mode keys flash followed by the TV mode key light remaining on.
3. Press and hold the LAST key for 3 seconds until the TV mode key light briefly turns off then stays on, then release the LAST key.
4. Press and release the LAST key to save the setting. The TV mode key light turns off indicating successful setup. The channel commands will now work for different devices.

F-II. Channel Always Controls your Set Top Box (Factory Default)

1. Press and hold the TV key and while holding it pressed, press the OK key for 1 second.
2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.
3. Press and hold the LAST key for 3 seconds until the TV mode key light briefly turns off then remains on.
4. Press and release the STB mode key. The selected mode key light remains on.
5. Press and release the LAST key to save the setting.

The STB mode key light will turn off indicating a successful initial setup. The channel commands will be setup for your Set Top Box regardless of what mode is selected. If the selected mode key light flashes for 3 seconds and turns off, then you will need to start over from step 1.

G. Mode Deactivation

If you'd like to deactivate a device mode, then follow the instructions below:

1. Press and hold the mode key to be deactivated (TV, DVD, or AUX) and while holding it pressed, press the OK key for one second.
2. Release both keys, all of the mode keys will flash and then the selected mode key light will remain on.
3. Enter the 4-digit code 1754 by pressing the numerical keys (0-9). The selected mode key light will blink for each digit entry and will remain off after the entry of the fourth digit - indicating the mode is deactivated.

Note the STB mode cannot be deactivated.

H. Multiple Device Power Control Setup Options

After pressing the STB key, pressing the Power key turns the Set Top Box on or off, AND turns on or off the TV if it has been setup. If you want the Power key to turn on other devices at the same time you can enable these as follows:

1. Press and hold the STB key and while holding it pressed, press the OK key for 1 second. Then release both keys. You are now in setup mode.
2. Press and release the mode key (TV, DVD or AUX) you want to enable.
3. Press and release the 1 key. The selected mode is now enabled. If no mode key is pressed instead 2 ALL modes (TV, DVD and AUX) will be enabled.

To remove a mode from the Power key:

1. Press and hold the STB key and while holding it pressed, press the OK key for 1 second. Then release both keys. You are now in setup mode.
2. Press and release the mode key (TV, DVD or AUX) you want to disable.
3. Press and release the 0 key. The selected mode is now disabled. If no mode key is pressed in step 2, ALL modes (TV, DVD and AUX) will be disabled.

Note you can turn individual devices on/off by pressing the desired Mode key followed by the Power key. It is important to point your MXv3 remote directly towards the devices for this feature to operate correctly.

I. Backlight Cancellation Feature

Your MXv3 Remote Control has the ability to toggle between turning the backlights on or off. If you wish to use this feature, follow these instructions.

1. Press and hold the TV key and while holding it pressed, press the OK key for one second and release both keys at the same time.
2. All the mode keys flash and the TV mode key light stays on.
3. Press the GUIDE key, all backlights will no longer turn on.

To reverse this process so that the backlights turn on when the remote control is being used, simply follow the same steps of the above section one more time.

J. Resetting the Remote Control to the Factory Default Settings

1. Press and hold the TV key and while holding it pressed, press the OK key for one second and release both keys at the same time.
2. All the mode keys will flash, the TV mode key light will stay on.
3. Press and hold the DELETE key for 3 seconds until the TV mode key blinks and stays off. The remote control is now reset to factory default settings. If you want to use the remote control for your TV and other devices, you will need to setup the TV, DVD and AUX mode keys.
4. If no key is pressed within 30 seconds, the remote control times out. The selected mode key light flashes for 3 seconds and turns off. The remote control returns to normal operation and you will need to start over.

K. Troubleshooting Learning

You can only learn one device type under any one mode key. For example, only learn TV codes under the TV mode, DVD codes under the DVD mode, etc. If you are trying to learn from a "Universal" remote, it might have more than one code type stored under a mode.

- a. No functions may be stored under the LEARN key, or in the STB mode.
- b. Depending on the remote you are trying to learn, some keys may not be learnable.

c. Only one original device type can be learned per individual mode.

d. Use fresh batteries for your original remote, and your MXv3 Remote Control.

e. Keep at least three feet away from incandescent or low-energy lights when learning.

f. Before learning, clear all learned commands (refer to Section D-II) then try learning 2 or 3 commands initially.

g. Point your original remote at the bottom end of your MXv3 Remote Control so the IR elements on both remotes are directly in line with each other (see diagram to the left). You may need to adjust the height of either remote to achieve this.

h. Avoid learning your original remote's Volume/Mute keys unless you are sure these operate the same device.

i. Avoid learning your original remote's VCR or DVD transport keys unless you're sure these operate the same device.

j. If learning the first or second keys for a mode results in continuous errors then try the following:

- i. End the learn session by pressing the LEARN key.
- ii. Clear out the learned commands for that mode.
- iii. Check the IR elements are correctly aligned between the two remotes.
- iv. Adjust the distance between the two remotes to be closer (e.g. half an inch) or further away (e.g. 2 inches) from each other.
- v. Try learning the original remote for that mode again. If problems reoccur with the same key check the original remote key being learned - does it transmit? Does it operate the target device? Try learning that key under a different clear mode. If it learns OK then it is likely to be a different code type from the others and cannot be learned under the same mode.

S30

PROGRAMMING YOUR PBTV REMOTE FOR POWER & VOLUME



START WITH TV TURNED ON

CODE SEARCH METHOD

- Power **1** on the TV and point the remote control at the TV set
- Press and hold the OK **2** and MENU **3** for three seconds until the power button flashes twice
- Press and release the ON DEMAND **4** button
- Press and hold FF **5** (fast forward) button until the TV shuts off. Release the button immediately
- NOTE: It may take a few minutes for the device to respond
- Test the power to see if it turns TV back on

IF THE VOLUME WORKS, DO THE FOLLOWING STEPS:

LOCK THE VOLUME METHOD

- Press and hold the OK **2** and MENU **3** for three seconds until the power button flashes twice
- Release both keys and press POWER **1**
- Press the ON DEMAND button **4**
- Press the OK **2**

URC62440

REMOTE CONTROL USER'S GUIDE CONTROL REMOTO: GUÍA DEL USUARIO

Getting Started

Primeros Pasos

Controls **PLAYBACK** of live and recorded TV
Controla la **REPRODUCCIÓN** de TV en vivo y grabada


Used in the program guide for **PAGE** and **DAY** navigation
Se utiliza en la guía de programas para navegar por las **PÁGINAS** y los **DÍAS**

Displays main cable **MENU**
Muestra el **MENU** principal para cable

EXITS current menu and returns to current program
SALE del menú en curso y vuelve al programa en curso

Displays program **GUIDE**
Muestra la **GUÍA** de programas

Controls and **MUTES** TV **VOLUME**
Controla y **SILENCIA** EL **VOLÚMEN** DEL TELEVISOR

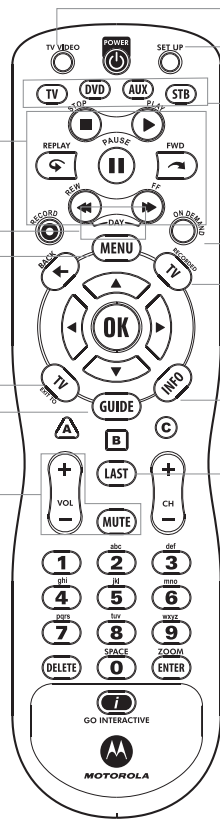

Used to cycle through video inputs on TV or Audio Receiver
Se utiliza para recorrer las entradas de video ajustadas en el TV o Receptor de Audio

Used to enter remote control **SETUP**
Se utiliza para ingresar la **CONFIGURACIÓN** del control remoto

Controls the device related to whichever mode key was last pressed
Controla el equipo relacionado a la tecla de modo pulsada por última vez

Accesses **ON DEMAND** program library
Accede a la biblioteca de programas **A DEMANDA**

Displays a **LIST** of recorded programs
Muestra una **LISTA** de los programas grabados

Displays **INFO** for currently selected program
Muestra **INFORMACIÓN** sobre el programa seleccionado

Returns to **LAST** channel you were watching
Vuelve al **ÚLTIMO** canal que estuvo mirando



Note/Nota:

Make sure all home theater equipment is **ON** before starting remote control setup.
Asegúrese de que todo el equipo de cine en casa (home theater) esté **ENCENDIDO (ON)** antes de comenzar la configuración del control remoto.

- 1 Remove battery cover.
Retire la tapa del compartimento de pilas.



- 2 Insert 2 AA batteries. Match the + and - marks.
Coloque 2 pilas AA. Haga coincidir las marcas "+" y "-".



- 3 Replace battery cover.
Vuelva a colocar la tapa del compartimento de pilas.



Tip/Consejo:

The Mode Key will blink 5 times with each key-press when batteries need replacement.
La tecla de Modo parpadeará 5 veces con cada pulsación de tecla cuando sea necesario reemplazar las pilas.


Configuración - Método A:

Marcas famosas

- 1 Press and hold **SETUP** until the mode key blinks twice.
Presione y mantenga presionada la tecla **SETUP** (Configurar) hasta que la tecla de modo parpadee dos veces.



- 2 Press the mode key for device you wish to setup. The mode key stays lit.
Presione la tecla de modo para el equipo que desee configurar. La tecla de modo permanece encendida.



- 3 Find your device and brand from the charts below and note the **DIGIT** key assigned to your brand. Press and hold down the **DIGIT** key for your device/brand.
Busque su equipo y marca en las tablas que figuran a continuación y observe el código de **DÍGITO** (Digit) asignado a su marca. Presione y mantenga presionada la tecla **DIGIT** (DÍGITO) que corresponda a su equipo/marca.



- 4 Let go of the key when your device turns off. Setup for that device is complete.
Suelte la tecla cuando su equipo se apague. La configuración para ese equipo se ha completado.

2 BLINKS = @SUCCESS
1 LONG BLINK = @FAILURE
2 PARPADEOS = CORRECTA
1 PARPADEO LARGO = INCORRECTA



Tip/Consejo:

If your brand does not appear in the brand chart, perform setup using either **DIRECT CODE ENTRY** or **CODE SEARCH**.

Si la marca que utiliza no aparece en la tabla de marcas, realice la configuración utilizando ya sea **ENTRADA DIRECTA DE CÓDIGO** O **BÚSQUEDA DE CÓDIGO**.

DIGIT Número	TV	DIGIT Número	DVD/VCR	DIGIT Número	Audio
1	Insignia / Dynex	1	Insignia / Dynex	1	Bose
2	LG / Zenith	2	LG	2	Denon
3	Mitsubishi	3	Panasonic	3	LG
4	Panasonic	4	Phillips / Magnavox	4	Onkyo
5	Philips / Magnavox	5	RCA	5	Panasonic
6	Samsung	6	Samsung	6	Phillips
7	Sharp	7	Sharp	7	Pioneer
8	Sony	8	Sony	8	Samsung
9	Toshiba	9	Sylvania	9	Sony
0	Vizio	0	Toshiba	0	Yamaha

Setup Method C:

Setup DVD and AUDIO using Direct Code Entry

Configuración – Método C:

Configuración de DVD y AUDIO utilizando Entrada Directa de Código

1 Press the mode key for the device you wish to set up.
Presione la tecla de modo para el equipo que desee configurar.



2 Press and hold SETUP until the mode key blinks twice.
Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.



3 Enter the 1st code for your brand from the code list.
Ingrese el primer código que corresponda a su marca de la lista de códigos.



the device turns off,

4 Press the power key to test with your equipment. If the device turns off, setup is complete.
Presione la tecla de encendido/apagado para probar con su equipo. Si el equipo se apaga, la configuración se ha completado.



5 If the device does not turn off, then repeat SETUP METHOD C using the next code for your brand.

Si el equipo no se apaga, repita el MÉTODO DE CONFIGURACIÓN C utilizando el próximo código que corresponda a su marca.



Setup Method D:

Code Search

Configuración – Método D:

Búsqueda de Códigos

1 Press and hold SETUP until the mode key blinks twice.
Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.




2 Press the mode key for the device you wish to setup. The mode key stays lit.
Presione la tecla de modo para el equipo que desee configurar. La tecla de modo permanece encendida.



3 Press and hold down the OK/SELECT key.
Presione y mantenga presionada la tecla OK/SELECT (Aceptar/Seleccionar).



4 Let go of the OK/SELECT key when your device turns off.
Suelte la tecla OK/SELECT (Aceptar/Seleccionar) cuando su equipo se apague.

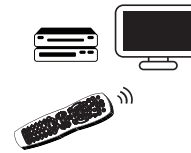

Setup Method E:

Setting Volume Controls

Configuración – Método E:

Configuración de los Controles de Volumen

1 Press and hold SETUP until the mode key blinks twice.
Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.



2 Press VOLUME + key.
Presione la tecla VOLUME + (Aumentar volumen).



3 Press the mode key that corresponds to the device you use for volume controls.
Presione la tecla de modo que corresponda al equipo que está utilizando para controles de volumen.



Setup Method F:

Locking Input Switch To One Device

Configuración – Método F:

Bloqueo del control de entrada con ajuste a un equipo

1 Press and hold SETUP until the mode key blinks twice.
Presione y mantenga presionada la tecla SETUP (Configurar) hasta que la tecla de modo parpadee dos veces.



2 Press the INPUT key.
Presione la tecla INPUT (Entrada).



3 Press the mode key that corresponds with the device you use for changing audio/video inputs.
Presione la tecla de modo que corresponda al equipo que está utilizando para cambio de entradas audio/video.



Codes: Blu-ray

Denon	2258, 2748
Harman/Kardon	2927, 3228
Insignia	0675, 2428, 2596
Integra	2147
JVC	2365, 2855
Lexicon	2545

LG	0741, 1602
Magnavox	0675
Marantz	2414
Memorex	2331
Olevia	2331
Onkyo	2147



Códigos : Blu-ray

Oppo	2545
Parasonic	1641
Philips	2084, 2434
Pioneer	0142, 2442, 2854
Samsung	0199
Sharp	2250

Sony	1516
Sylvania	0675
Toshiba	2705, 3157
Viore	2553
Vizio	2563
Yamaha	2298

